


MR-J4-A/MR-J4-A-RJ Connections with Peripheral Equipment (Note 1)

A A-RJ

Peripheral equipment is connected to MR-J4-A/MR-J4-A-RJ as described below. Connectors, cables, options, and other necessary equipment are available so that users can set up the servo amplifier easily and start using it right away.

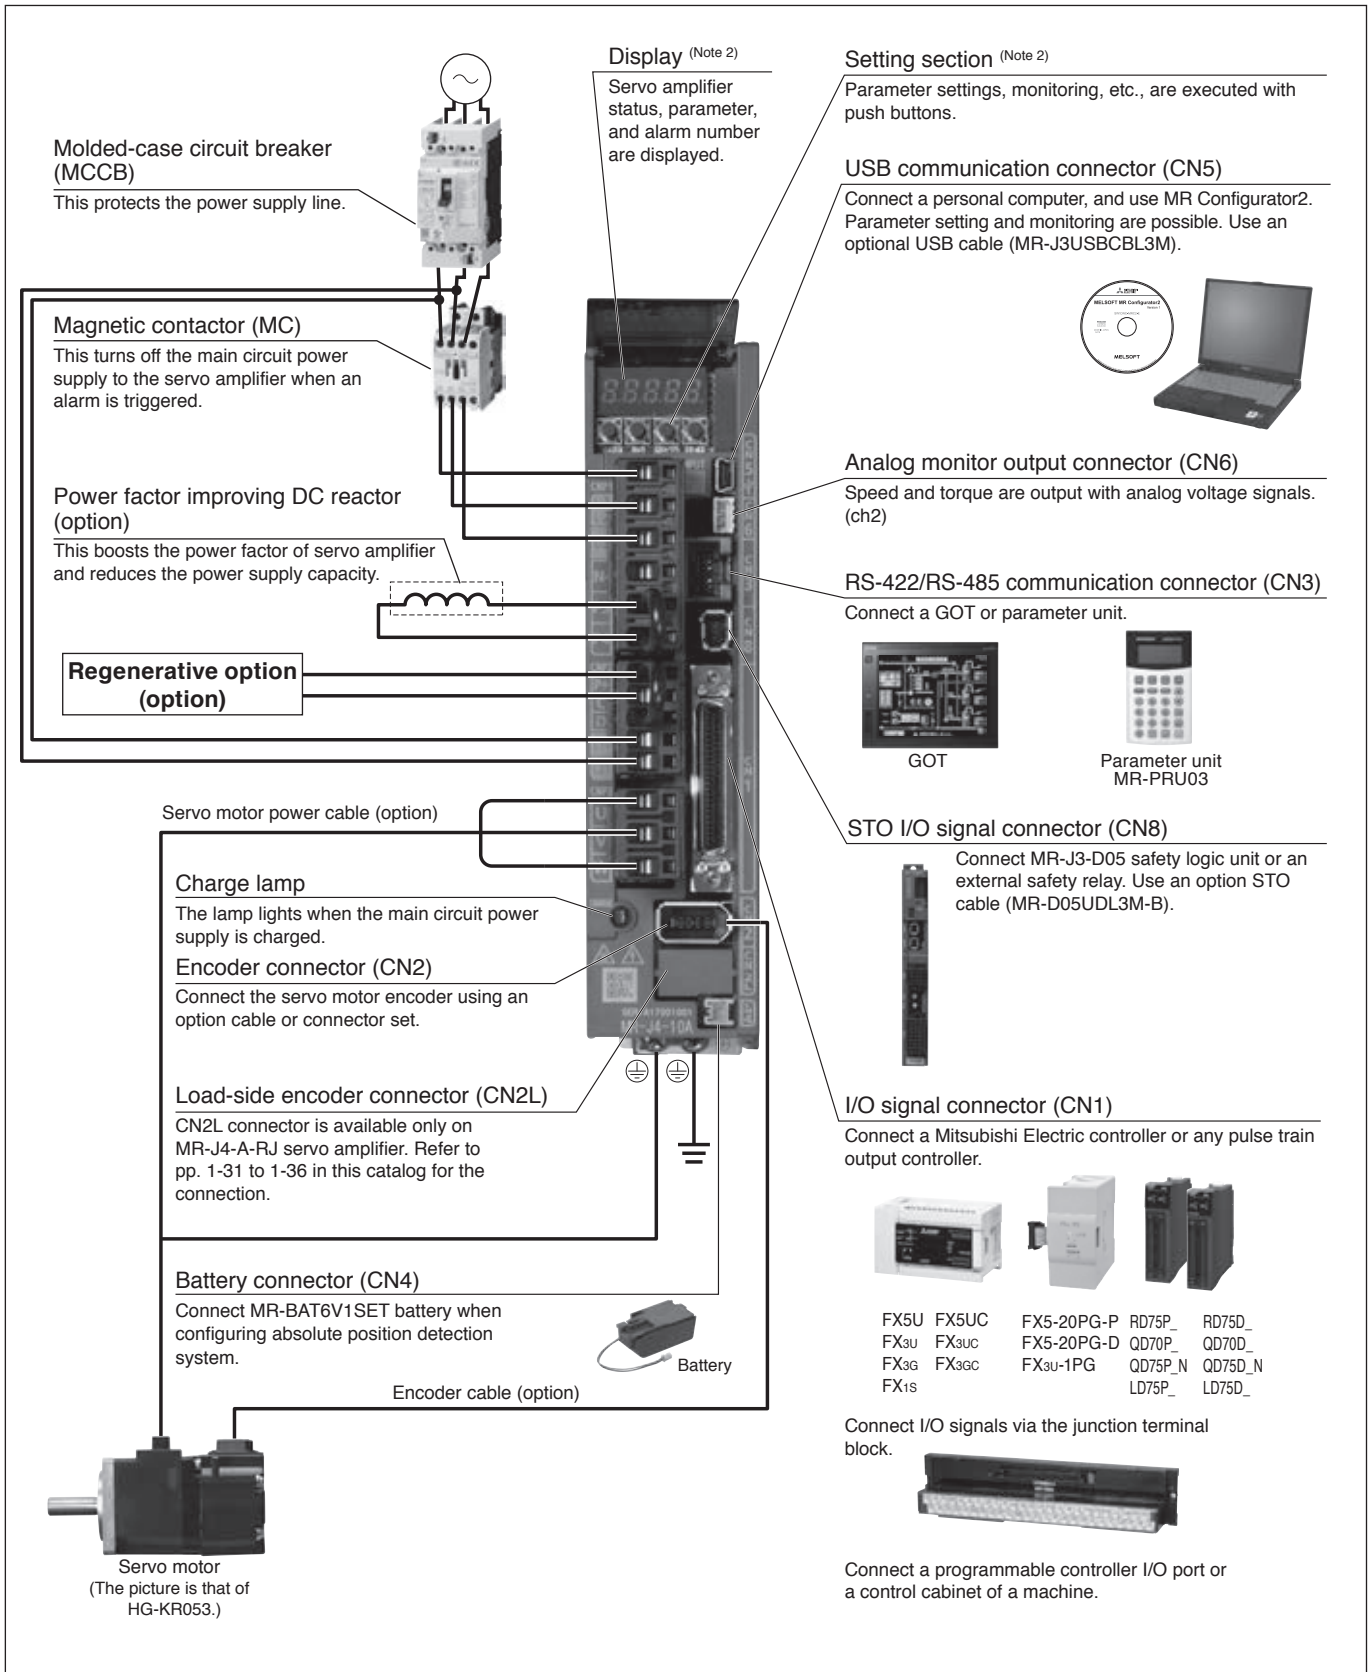

Notes: 1. The connection with the peripheral equipment is an example for MR-J4-350A/MR-J4-350A-RJ or smaller servo amplifiers. Refer to "MR-J4-A_(-RJ) MR-J4-03A6(-RJ) Servo Amplifier Instruction Manual" for the actual connections.
2. This picture shows when the display cover is open.

Servo Amplifiers
Rotary Servo Motors
Linear Servo Motors
Direct Drive Motors
Options/Peripheral Equipment
LV/S/Wires
Product List
Precautions